


USB Alarm Expansion Box

Quick Start Guide

1. Notes

- Please read this instruction carefully before using the product and keep it for further reference.
- All the examples and pictures used here are for reference only.
- The device is used to expand alarm interfaces of NVR or DVR.

2. Interface Instruction

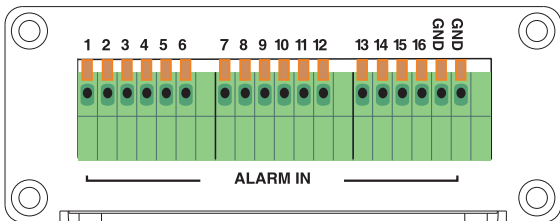


Alarm IN (1~16): 16 CH alarm input

GND : Ground

To connect alarm input devices:

Press and hold the orange buttons of alarm in (1~16) and GND and then insert the signal wires of the alarm input devices into the corresponding ports separately. Finally, release the orange buttons.

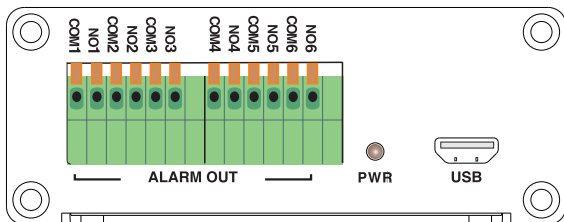

Alarm OUT : 6 CH alarm output.

To connect alarm output devices:

Press and hold the orange buttons and then insert the signal wires of the alarm output devices into the corresponding ports of NO and COM separately. Finally, release the orange buttons.


PWR : Power indicator.

USB : Power input interface or data transmission interface.

Power connection : Find the following USB cable from your packing box.

- 1 Insert it into the USB interface of DVR/NVR
- 2 Insert it into the USB interface of alarm expansion box

3 Dimensions & Specifications

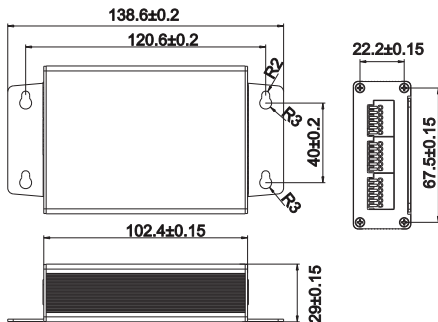

Alarm Input	16
Alarm Output	6
USB	USB2.0 × 1
Power	5V/1A
Power Consumption	≤5W
Operating Temperature	-10°C~50°C
Operating Humidity	10%~90%